

## Safe Use of Lifts, Hoists and Jacks

- Regularly inspect all lifts and hoists. Check oil levels.
- Safety devices should be maintained fully operable.
- Never block lift or hoist control valves open or shut or leave them unattended.
- Check to see that adapters are set accurately, or that frame contact devices are in firm contact with car underbeds.
- Place the vehicle in neutral and release the parking brake when moving them using electric vehicle pushers. Avoid using hydraulic floor jacks to relocate vehicles.
- Always use the right type of jack for the job (including transmission jacks).
- Never get under a vehicle that is not properly supported by jack stands.

Zenith provides workplace safety resources at: **TheZenith.com**<sup>®</sup>